

Fulbrook Lane, Sherbourne Warwick, CV35 8AR, ENGLAND Tel: 01926 624800 Fax: 01926 624900

LYNX MICRO SYSTEM BLUETOOTH ADAPTER (GENERIC)

REF: E091-1 26-04-11


INSTALLATION INSTRUCTIONS

The Bluetooth Adapter provides wireless Bluetooth connections to Lvnx equipment.

The Bluetooth Adapter is powered from an internal rechargeable battery and must be charged before use.

The Bluetooth Adapter can be used with an Audio Adapter or any interface from the latest range of portable radio equipment.

When used with radio equipment, the adapter supports the radio priority audio mute function and any Bluetooth audio is automatically reduced in volume during radio reception.

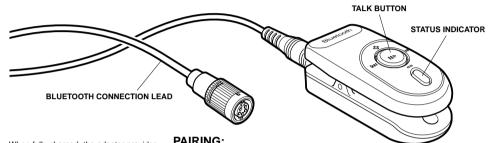

When fully charged, the adapter provides a minimum of eight hours talk time and three hundred hours standby time.

CHARGING:

To charge the adapter, plug the charger into the mains supply and connect the adapter using the USB charger lead.

The status indicator shows red while the adapter is charging and goes off when the adapter is fully charged. Charging takes approximately one hour.

WARNING:

The mains charger supplied with the Bluetooth Adapter is designed specifically for use with equipment manufactured by Lynx Avionics; do not use with other makes and models of equipment.

Never expose the charger to rain or moisture. The charger is not waterproof and is only intended to be used indoors



The charger contains live parts, at mains voltage, and should not be dismantled.

ON/OFF CONTROL:

IMPORTANT

The adapter is turned on and off using the STATUS indicator.

1. To turn the adapter on, press and hold the **STATUS** indicator for six seconds.

The status indicator will flash blue every three seconds.

To turn the adapter off, press and hold the STATUS indicator for six seconds.

PAIRING:

Before the adapter can be used with a another device the two devices must be 'paired' together; this establishes two way communication between the two devices and stores the connection information for future use

To pair the adapter with a telephone:

- 1. Make sure that the adapter is turned off.
- Set the adapter to pairing mode (discoverable) by pressing and holding the STATUS button for ten seconds.

The status indicator will flash red and blue.

3. Use the telephone's Bluetooth pairing procedure to look for new devices

The adapter will appear in the list of available devices as: Lvnx BTA-1

4. Select the adapter (Lynx BTA-1) and enter the PIN passcode: 0000

The status indicator will flash blue twice to indicate that the pairing has been successful.

It can take up to sixty seconds for two devices to establish a connection the first time that they are used together.

The adapter can store pairing information for eight Bluetooth devices but only one device can be connected at a time. Any of the eight paired devices can initiate a connection to the adapter but the adapter will only automatically reconnect to the last device used.

Once the adapter has been paired and connected to a device, it will reconnect automatically whenever it is within range.

MAKING CALLS:

The adapter supports the Bluetooth Handsfree profile and, depending on the telephone, will provide at least the minimum basic functions listed below:

- 1. To answer a call or end a call, press the TALK button for less than one second.
- 2. To simplify telephone use in an aircraft, the adapter will automatically answer a call after three rings. To prevent the adapter from answering a call, immediately press and hold the TALK button until you hear a tone.
- 3. To transfer a call back to the telephone, press and hold the TALK button until you hear a tone.
- 4. To redial the last number called, press and hold the TALK button until you hear a tone
- 5. To adjust the headset volume, use the TALK button + or -.

MUSIC:

To pair with a music player, follow the instructions for pairing with a telephone. If the music player does not have a screen menu, the two devices will connect if they are both put into pairing mode at the same time

- 1. To stop music playback, press the **TALK** button for less than one second.
- To move forward or back through music tracks use the TALK button > or <.